



Features & Benefits

- Low cost linkage
- East to install

Product Code

VR-G-LKN-1

Linkage kit for VA-05 actuator types

1. Rotate the valve shoe to close the required port the shoe position is indicated by the machined point (fig. 1) of the 3 points of the end of the valve stem.

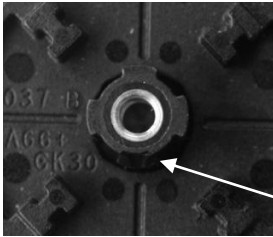


Fig. 1

2. If fitted, remove the knob and leave the plastic snap ring on the valve body.



3. Place the mounting plate into the four protruding points.



4. Fit the Teflon washer over the valve stem.



5. Fit the valve stem extender onto the valve, paying attention to the position of the stem shaft. The 1/2 flat, which indicates the closed side of the valve body (fig. 2) goes on the side of the machined point (fig. 1) of the 3 points of the end of the valve stem.

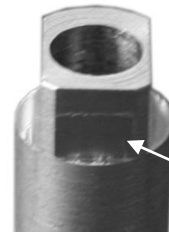


Fig. 2




WEEE Directive:



At the end of the products useful life please dispose as per the local regulations.
 Do not dispose of with normal household waste.
 Do not burn.

6. Place the actuator onto the linkage, ensuring that the anti-rotation pin is secured (fig. 3).

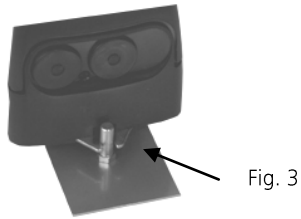

7. Tighten the screw with the lock washer, by holding the flats of the stem extender to prevent it from spinning (ensure that you have the lock washer over the screw). Rotating friction is limited by the Teflon disc and heights of the stem extender and the mounting screw.



Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.